

## **Hewlett-Packard 3015 Printers:**

**IMPORTANT:** Ensure the printer power is switched OFF, and then disconnect the printer power cord from the AC outlet.



1. Slide the right-side rear panel toward the rear of the printer.



**Figure 1**

2. Insert the font card into the rear USB slot (slot nearest the interior of the printer). Ensure the font card is fully inserted in the card slot.



**Figure 2**

3. Replace the printer panel. Then reconnect the printer power cord and printer data cable.
4. Refer to the TROY Quick-Start Guide (provided with your TROY Font Card Solution) for instructions on installing the required TROY software and support files.

**NOTE:** If assistance is required for installing the font card, please call TROY Technical Support at (800) 332-6427. Customers outside the United States, please call (304) 232-0899.