

Hewlett-Packard 3005 Printers:

IMPORTANT: Ensure the printer power is switched OFF, and then disconnect the printer power cord from the AC outlet.



1. Unsnap and slide the right-side panel toward the rear of the printer (Figure 1).
2. Open the electronics access door (Figure 2). For easier access to the USB connection, the metal door can be easily removed by lifting the door off the hinge slots.



Figure 1



Figure 2

3. Insert the font card into the card slot nearest the printer circuit board (Figure 3). Ensure the font card is fully inserted in the card slot (Figure 4).

 


Figure 3



Figure 4

4. Replace the printer panels, and then reconnect the printer power cord and printer data cable.
5. Refer to the TROY Quick-Start Guide (provided with your TROY Font Card Solution) for instructions on installing the required TROY software and support files.

NOTE: If assistance is required for installing the font card, please call TROY Technical Support at (800) 332-6427. Customers outside the United States, please call (304) 232-0899.