 





m806Dxi Paper Orientation for Printing Pantograph:

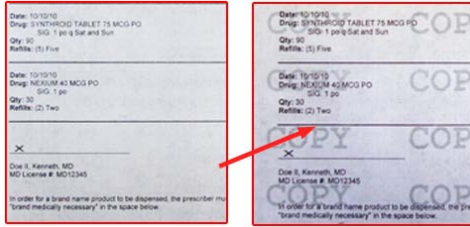

In order for pantographs to print properly on the M806 printer, the paper must be loaded in the proper orientation in the tray.

The following page sizes must be oriented in the tray so that the paper feeds into the printer wide edge first: Letter (2); A6 (24); A4 (26); JIS B6 (44); and Hagaki, a.k.a. Japanese Postcard (71).

 The following page sizes must be oriented in the tray so that the paper feeds into the printer narrow edge first: Executive (1); Legal (3); JIS Executive, a.k.a. Foolscap (10); A5 (25); JIS B5 (45); and Ofuku-Hagaki, a.k.a. Double Japanese Postcard (72).

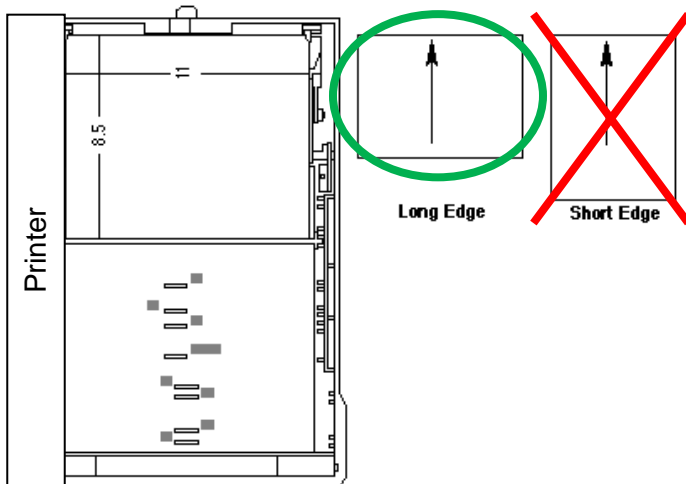

P/N 50-04932-001 Rev. A